


City & State of Downlink Location Glasgow MT
 BLM Office Glasgow FS
 Diagram Contact Steve Klessens
 Diagram Code: GlasgowMT

Diagram: 11/17/03

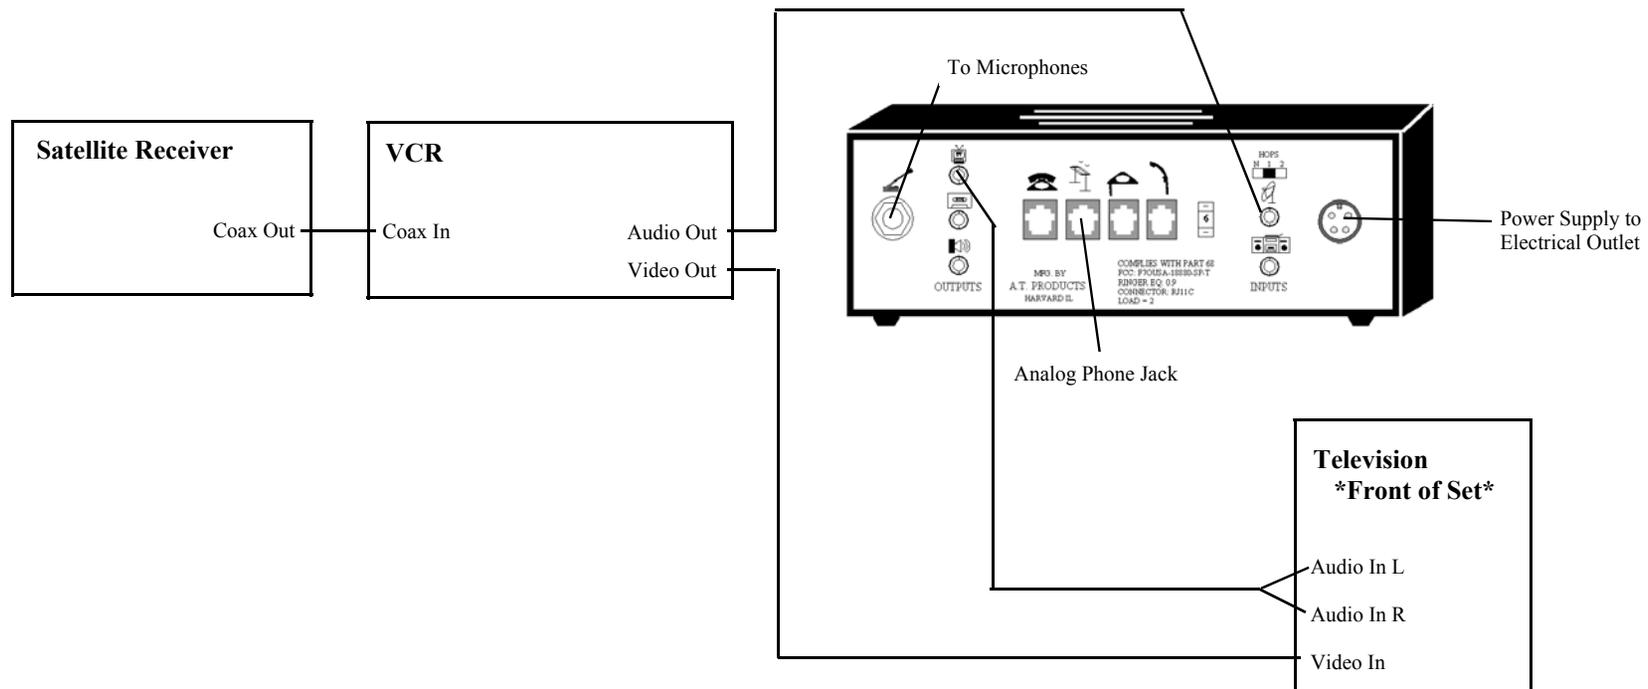

Site Specific Instructions and Comments

Connect the Analog Phone line to the back of the AT2001 PTT Box.

Set VCR to Channel 3

Set TV to Channel 3

Press the Input Button on the VCR Remote to set TV to “Front”

Glasgow Field Office
 Glasgow MT